

Procedures

Follow these procedures for each bowl to keep the machine clean and operating properly.

Refer to the operators manual for detailed information regarding machine operation.

NOTE

Inspect the parts for wear during the disassembly. Replace any worn or broken parts immediately.

A. Emptying the Bowl

1. From serve mode, press and hold the clean button for 1 second to go to standby mode. Then press and hold the clean button for 1 second to go to clean mode.



NOTE


In clean mode, the display shows the consistency bars incrementally illuminating.

2. Remove the condensation ring located under the spigot.
3. After about 5 minutes, open the spigot to drain to bowl.
4. Stop the clean cycle by pressing the power button on the left bowl or the standby button on the right bowl.
5. Fill the bowl with cool tap water. Time Saver Tip: use Stera-Sheen solution (prepared following manufacturer's instructions) to increase efficiency when cleaning parts.

NOTE

Running Stera-Sheen solution through the machine makes cleaning parts easier after disassembly.


6. Start the clean cycle by pressing the power/standby button and let the auger rotate for at least 30 seconds.
7. Drain the water out of the machine then stop the clean cycle by pressing the power/standby button.
8. Turn the machine off using the power switch located on the underside of the machine near the left front leg. Unplug the machine.

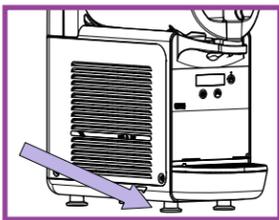

B. Disassembly


Disassembly of Bowl

1. Remove the top cover from the bowl by pressing the lock button and sliding the cover forward.
2. Push the metal bowl lever upwards and slide the bowl forwards. The lever is located on the underside of the bowl next to the spigot.

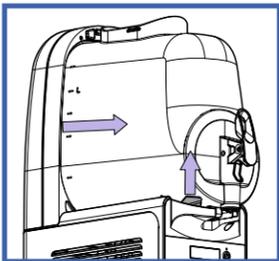

Disassembly of Auger


1. Slide the auger forwards off the evaporator.

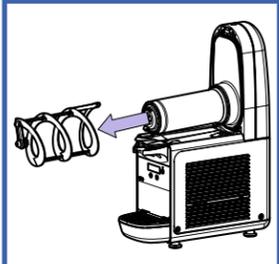


2. Remove the outer magnetic rotor assembly. The assembly is secured to the evaporator by a magnet and may need sufficient force to break the magnetic field.

B. Disassembly (continued)

3. Remove the bowl gasket.

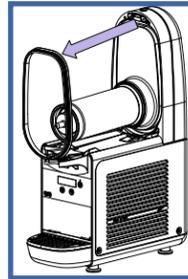

4. Remove the spigot pin and pull the spigot assembly upwards.

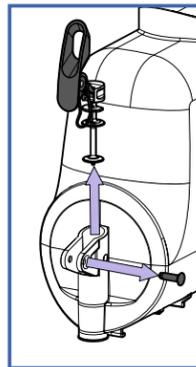


C. Cleaning

Cleaning Disassembled Parts

1. Place all parts in 90° to 110°F mild detergent water and wash thoroughly. Use the brushes to thoroughly clean parts.
2. Rinse, then place all parts in a sanitizing solution for at least 1 minute.
3. Let the parts air dry completely before assembling in machine.

Cleaning the Machine


1. Clean the evaporator cylinder with a large brush and sanitizing solution.
2. Wash all surfaces of the machine to remove spilled or dried mix.
3. Remove the drip tray. Clean and replace the tray.

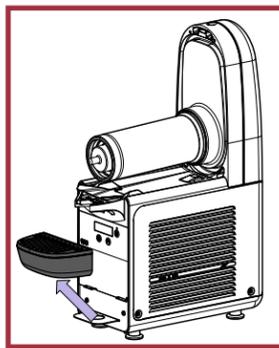

D. Assembly


Installing Spigot

1. Lubricate the edges of the spigot with Total Blend lubricant.
2. Install the spigot into the front of the bowl and secure it with the spigot pin.

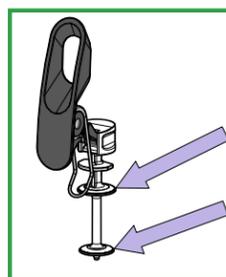

D. Assembly (continued)

3. Install the outer magnetic rotor assembly onto the front of the evaporator.
4. Slide the auger onto the evaporator and rotate it so that it engages the coupling.
6. Apply Total Blend to the dome shape on the front of the auger.

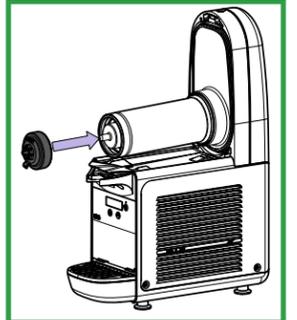

Installing Bowl

1. Install the bowl gasket making sure the large diameter is against the rear wall.
2. Slide the bowl onto the machine and push it back until the bowl lever engages.

E. Sanitizing & Startup

Sanitizing Machine

1. Prepare 2 gallons of Stera-Sheen sanitizing solution for each bowl following the manufacturer's instructions.
2. Pour the sanitizing solution into the bowls.
3. Plug the machine in and turn the machine on with the power switch.
4. Press and hold the power button for 1 second. If sanitizing the left bowl, press the standby button.
5. Use a sanitized soft bristle brush dipped in sanitizing solution to clean the bowl sides and underside of the bowl cover.
6. After about 5 minutes open the spigot and drain the solution.
7. Press the power/standby button to stop the clean cycle. Allow the bowl to drain completely.



Freeze Down and Operation

1. Sanitize immediately before use.
2. Place a container under the spigot and rinse the bowl with mix to flush out any remaining sanitizing solution.
3. Fill the bowl with chilled mix.
4. Press the power/standby button. Then press and hold the freeze button for 1 second to start freezing product.
5. The snowflake icon displays on the screen and the consistency bars are displayed. A triangle above the consistency bars indicate the current consistency.
6. Momentarily press the freeze or clean button to increase or decrease consistency.
7. Product is ready when the triangle indicator is above the consistency setting.



Follow Local Codes

Some local and state health codes dictate the frequency and procedure for cleaning and sanitizing. Be sure the cleaning procedures you follow are in accordance to any local health codes.